


Oil RAM pump

Model 82885, series “H”



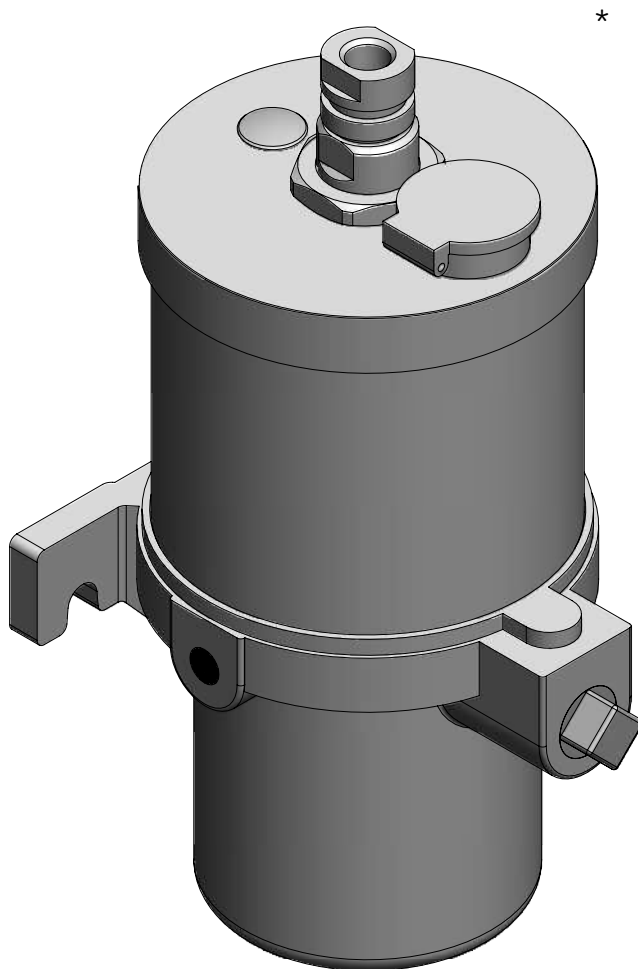

Date of issue	October 2022
Form number	402818
Version	2

* Indicates change.

Contents

Declaration of Incorporation*	3
U.K. Declaration of Incorporation* ...	4
Safety*	5
Signal words for safety	5
Specifications	6
To fill reservoir	6
To prime system	7
Operation of the pump	7
What to do if	7
Service parts	9
Types of installations	11
Mechanical control	11
Electrical control	11
Manual control	11
Warranty	12

* Indicates change.

	Declaration of Incorporation*	DOCUMENT NUMBER 402818.Dol
<p style="text-align: center;">Manufacturer name/address: Lincoln Industrial Corporation 5148 N. Hanley Road St. Louis, MO 63134 U.S.A. TEL: +1 (314) 679-4200 FAX: +1 (314) 679-4367</p> <p style="text-align: center;">Authorized to compile the technical file: SKF Lubrication Systems Germany GmbH Heinrich-Hertz-Straße 2-8 69190 Walldorf, Germany TEL: +49 (0) 6227-330</p> <p style="text-align: center;">EMAIL: robert.collins@skf.com WEBSITE: www.skf.com</p>		

This Declaration of Incorporation is issued under sole responsibility of the manufacturer. Lincoln Industrial Corporation hereby declares that the partly completed machinery stated below:

Name: RAM pumps
Model number(s): 82885
Description: Air operated pumps
Year of CE: 2022

in its intended use, is in conformity with the relevant union harmonization legislation:

Machinery Directive 2006/42/EC

and conforms to the following harmonized standards:

EN ISO 4413: 2010
Hydraulic fluid power - General rules and safety requirements for systems and their components

EN ISO 12100: 2010
Safety of machinery. General principles for design. Risk assessment and risk reduction

EN ISO 809:1998+A1:2009
Pumps and pump units for liquids - Common safety requirements

EN 349:1993+A:2008
Safety of machinery – minimum gaps to avoid crushing of parts of the body

The following EHSR (Essential Health and Safety Requirements) have been applied:

1.1.2a - 1.1.2b - 1.1.2c - 1.1.3 - 1.1.5 -
1.2.5 - 1.3.2 - 1.3.3 - 1.3.5 - 1.3.7 - 1.3.8
- 1.5.3 - 1.7 - 1.7.1 - 1.7.1.1 - 1.7.3 - 1.7.4

The manufacturer maintains a technical construction file containing test reports and product documentation:

Technical file summary sheet number:
RA402816-00



The partly completed machinery shown above should not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the directive, where appropriate.

I, the undersigned of Lincoln Industrial Corporation, do hereby declare that the equipment specified above, in its intended use, conforms to the requirements of the above EC Directive(s).



Robert Collins
Technical Compliance Manager
St. Louis, MO, U.S.A.
2022/04/05

* Indicates change.

	U.K. Declaration of Incorporation*	DOCUMENT NUMBER UK402818CA
<p style="text-align: center;">Manufacturer name/address: Lincoln Industrial Corporation 5148 N. Hanley Road St. Louis, MO 63134 U.S.A. TEL: +1 (314) 679-4200 FAX: +1 (314) 679-4367</p> <p style="text-align: center;">Authorized to compile the technical file: SKF (U.K.) Limited 2 Canada Close Banbury, Oxfordshire, OX16 2RT, GBR</p> <p style="text-align: center;">EMAIL: robert.collins@skf.com WEBSITE: www.skf.com</p>		

This U.K. Declaration of Incorporation is issued under sole responsibility of the manufacturer. Lincoln Industrial Corporation hereby declares that the partly completed machinery stated below:

Name: RAM pumps
Model number(s): 82885
Description: Air operated pumps
Year of CE: 2022

in its intended use, is in conformity with the relevant union harmonization legislation:

Supply of Machinery (Safety) Regulations 2008 (S.I. 2008:1597)

along with the following Directive(s) that were also applied with the above legislation:

EN ISO 4413: 2010
Hydraulic fluid power - General rules and safety requirements for systems and their components

EN ISO 12100: 2010
Safety of machinery. General principles for design. Risk assessment and risk reduction

EN ISO 809:1998+A1:2009
Pumps and pump units for liquids - Common safety requirements

EN 349:1993+A:2008
Safety of machinery - Minimum gaps to avoid crushing of parts of the body

The following EHSR (Essential Health and Safety Requirements) have been applied:

1.1.2a - 1.1.2b - 1.1.2c - 1.1.3 - 1.1.5 - 1.2.5 - 1.3.2 - 1.3.3 - 1.3.5 - 1.3.7 - 1.3.8 - 1.5.3 - 1.7 - 1.7.1 - 1.7.1.1 - 1.7.3 - 1.7.4

The manufacturer maintains a technical construction file containing test reports and product documentation:

Technical file summary sheet number:
RA402816-00

The partly completed machinery shown above should not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the directive, where appropriate.

I, the undersigned of Lincoln Industrial Corporation, hereby declare that the equipment specified above, in its intended use, conforms with the Essential Health and Safety Requirements of U.K. legislation Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex I, Declaration of Incorporation by the time of placing it on the market.



Robert Collins
Technical Compliance Manager
St. Louis, MO, U.S.A.
2022/04/05

* Indicates change.

Safety*

The assembly must be installed, maintained and repaired exclusively by persons familiar with the instructions.

Always disconnect power source (electricity, air or hydraulic) from the equipment when it is not being used.

This equipment generates high pressure. Extreme caution should be used when operating this equipment as material leaks from loose or ruptured components can inject fluid through the skin and into the body. If any fluid appears to penetrate the skin, seek attention from a doctor immediately. Do not treat injury as a simple cut. Tell attending doctor exactly what type of fluid was injected.

Any other use not in accordance with instructions will result in loss of claim for warranty or liability.

- Do not misuse, over-pressurize, modify parts, use incompatible chemicals, fluids, or use worn and/or damaged parts.
- Do not exceed the stated maximum working pressure of the equipment or of the lowest rated component in your system.
- Always read and follow the manufacturer's recommendations regarding fluid compatibility, and the use of protective clothing and equipment.
- Failure to comply may result in personal injury and/or damage to equipment.

Explanation of signal words for safety

NOTE

Emphasizes useful hints and recommendations as well as information to prevent property damage and ensure efficient trouble-free operation.

CAUTION

Indicates a dangerous situation that can lead to light personal injury if precautionary measures are ignored.

WARNING

Indicates a dangerous situation that could lead to death or serious injury if precautionary measures are ignored.

DANGER

Indicates a dangerous situation that will lead to death or serious injury if precautionary measures are ignored.

WARNING

Do not operate equipment without reading and fully understanding safety warnings and instructions.



Failure to follow warnings and instructions may result in serious injury.

CAUTION

Do not operate equipment without wearing personal protective gear.

Wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

Failure to comply may result in light personal injury.



WARNING



Do not allow any body part to be trapped by equipment.

Body parts can be crushed by subassemblies during

operation.

Failure to comply may result in death or serious physical injury.

WARNING



Do not allow fluid to leak onto floor when operating

equipment. If spill occurs, clean any fluid on floor before continuing operation.

Failure to comply may result in death or serious personal injury.

WARNING

Do not use this equipment to supply, transport, or store hazardous substances and mixtures in accordance with annex I part 2-5 of the CLP regulation (EG 1272/2008) or HCS 29 CFR 1910.1200 marked with GHS01, GHS06 and GHS08 hazard pictograms shown:



* Indicates change.

Specifications

Ratio	Output per stroke	Reservoir capacity	Air inlet	Lubricant outlet	Lubricant operating pressure Type of system	Lubricant operating pressure		Recommended
						Minimum	Maximum	
20:1	0.45 in ³ (7,4 cm ³) ¹⁾	1 1/4 pints (591 cm ³)	1/4 in NPT (F)	1/4 in NPT (F)	SL-32	1 200 psi with 60 psi air (82,7 bar with 4,1 bar air)	3 500 psi with 175 psi air (262 bar with 12 bar air)	1 500 psi with 75 psi air (103 bar with 5,1 bar air)
20:1	0.45 in ³ (7,4 cm ³) ¹⁾	1 1/4 pints (591 cm ³)	1/4 in NPT (F)	1/4 in NPT (F)	SL-33	1 200 psi with 60 psi air (82,7 bar with 4,1 bar air)	3 500 psi with 175 psi air (262 bar with 12 bar air)	1 500 psi with 75 psi air (103 bar with 5,1 bar air)
20:1	0.45 in ³ (7,4 cm ³) ¹⁾	1 1/4 pints (591 cm ³)	1/4 in NPT (F)	1/4 in NPT (F)	SL-42	750 psi with 38 psi air (51,7 bar with 2,6 bar air)	1 000 psi with 50 psi air (69 psi with 3,4 bar air)	850 psi with 43 psi air (58,6 bar with 3 bar air)
20:1	0.45 in ³ (7,4 cm ³) ¹⁾	1 1/4 pints (591 cm ³)	1/4 in NPT (F)	1/4 in NPT (F)	SL-43	750 psi with 38 psi air (51,7 bar with 2,6 bar air)	1 000 psi with 50 psi air (69 psi with 3,4 bar air)	850 psi with 43 psi air (58,6 bar with 3 bar air)

¹⁾ Based on lubricants that are free from entrapped air.. Lubricants that are aerated will reduce output of pump.


The 82885 pump is used as the pumping unit for a centralized lubrication system having a single line circuit of SL-32, SL-33, SL-42 or SL-43 injectors. It is an air-operated, single-stroke, spring-return pump that discharges 0.450 in³ (7.37 cm³) into the circuit for each pump cycle.

The total quantity of lubricant needed for the lubrication cycle of the system must not exceed the lubricant discharged per pump stroke.

To fill reservoir

The transparent lubricant reservoir is filled through the filler cap at the top of the reservoir.

The lubricant strainer should be removed from the filler cap and cleaned periodically.

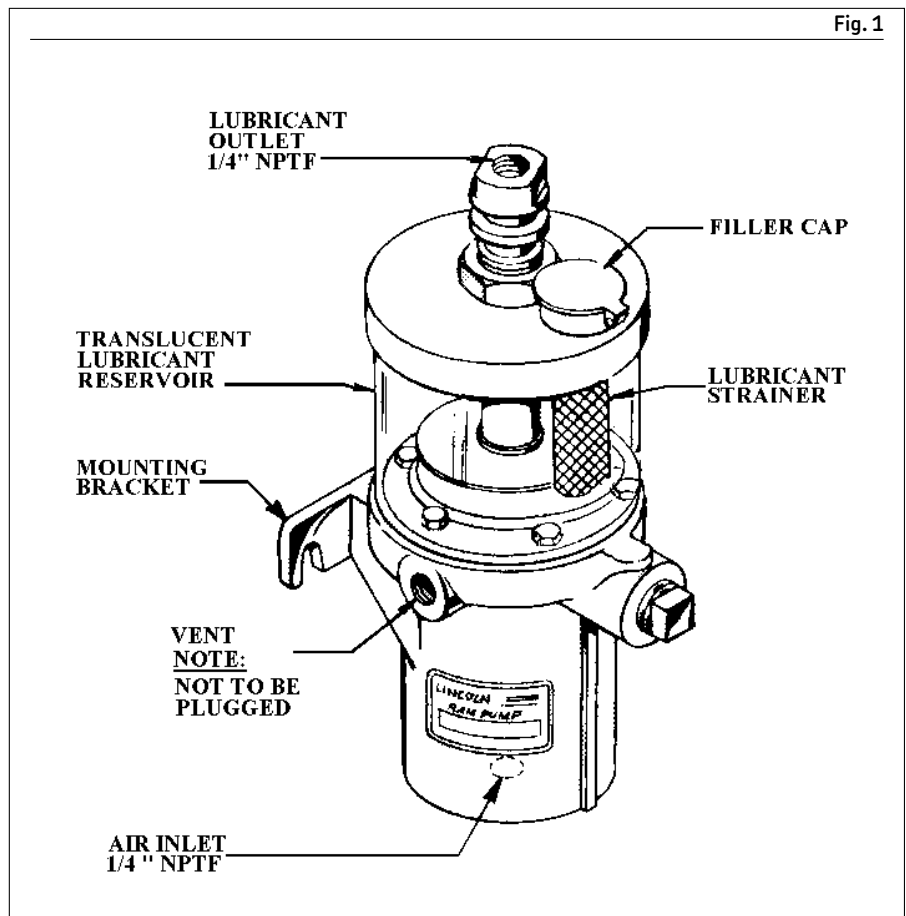

To prime system

Supply lines: after pump reservoir has been filled with recommended lubricant, loosen (do not remove) all plugs in dead ends of the injector manifolds and supply lines.

Operate pump until lubricant flows from around threads of any loosened plug.

Tighten this plug and continue to operate pump until lubricant flows from around threads of another loosened plug. Repeat this procedure until all supply lines are primed and all plugs are securely tightened.

Feeder lines: fill each feed line with lubricant before connecting lines to outlet of injectors and bearings. This will prevent having to cycle each injector to fill line between injector and bearing.

Injectors: check each injector for proper operation. Injector stem moves when injector discharges lubricant to bearing. This may require cycling system several times. After checking injectors for operation adjust injectors for the volume required for each bearing.

NOTE

Pump must be installed in a vertical position.

Operation of the pump

Lubricant in the 247202 Translucent reservoir flows into the cavity in the 247480 bushing and plunger assembly.

Compressed air entering the bottom of the 247476 air cylinder (1/4"n.P.T. Female) moves the 247478 piston upward. As the piston moves upward, the plunger is also moved upward into the bushing. As the plunger moves upward, it moves the charge of lubricant from the bushing cavity through the 84174 outlet check to the outlet of the pump.

When the air pressure to the 247476 air cylinder is relieved, the 247481 piston spring moves the piston and plunger downward. In its extreme down position, the plunger has retracted below the bushing port, permitting lubricant to flow into the bushing cavity.

What to do if

Pump loses prime. -

Check lubricant supply.

System fails to cycle and calculated system planning has been followed. - Lubricant may be leaking by the 66250 Ball Check or the 34445 Packing in the 84174 Check and Vent Assembly. Remove these parts and examine for presence of foreign particles. Clean, or replace parts if worn or damaged.


Pump fails to operate. -

Check air supply. Failure of Injectors to cycle can be caused by a leak in the supply line.

NOTE

In reassembling the 84174 check and extension assembly, the vent pressure must be reset. Vent pressure can be varied by the adjusting screw, 14288. The recommended pressure setting is 25 psi (1,7 bar) minimum to 75 psi (5,2 bar) maximum. An improper setting will affect the pump efficiency. Assemble 14288 with nonhardening loctite or stake threads after adjusting vent pressure.

Fig. 2

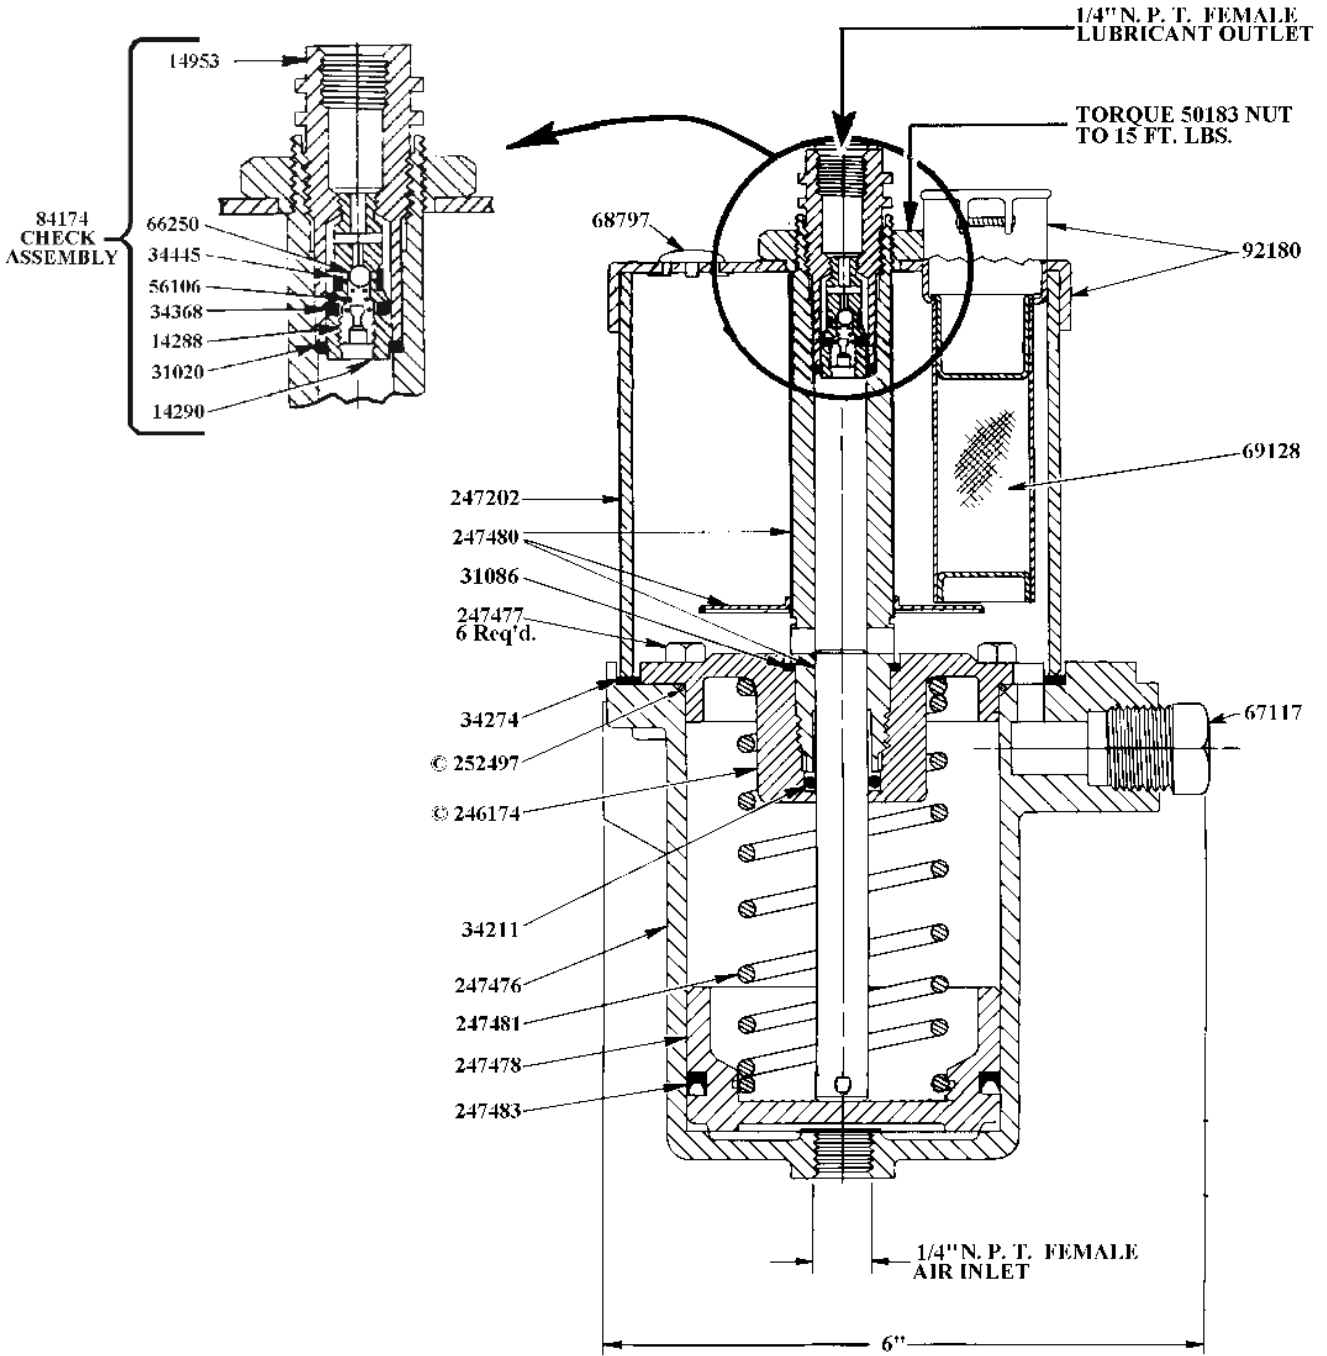


Service parts

Part no	Description	Quantity	Part no	Description	Quantity
14288	Ball stop	1	69295 ¹⁾	Filter	1
14290	Check body	1	84174	Check assembly	1
14953	Bushing	1	92180	Cover assembly	1
31020 ¹⁾	Gasket	1	246174	Cylinder end	1
31086 ¹⁾	Gasket	1	247202	Reservoir (Acrylic)	1
34211 ¹⁾	O-ring (Nitrile)	1	247476	Cylinder casting	1
34274 ¹⁾	Gasket (Neoprene)	1	247477	Screw	6
34368 ¹⁾	O-ring (Nitrile)	1	247478	Piston	1
34445 ¹⁾	Packing (nitrile)	1	247480	Bushing and plunger	1
51083	Nut	1	247481	Spring	1
56106 ¹⁾	Spring	1	247483 ¹⁾	U-cup (Nitrile)	1
66250 ¹⁾	Ball	1	252497 ¹⁾	O-ring (Nitrile)	1
67117	Pipe plug	2			
68797	Plug bottom	1			
69128	Strainer	1			

¹⁾ These components available as 247623 repair kit.

Fig. 3

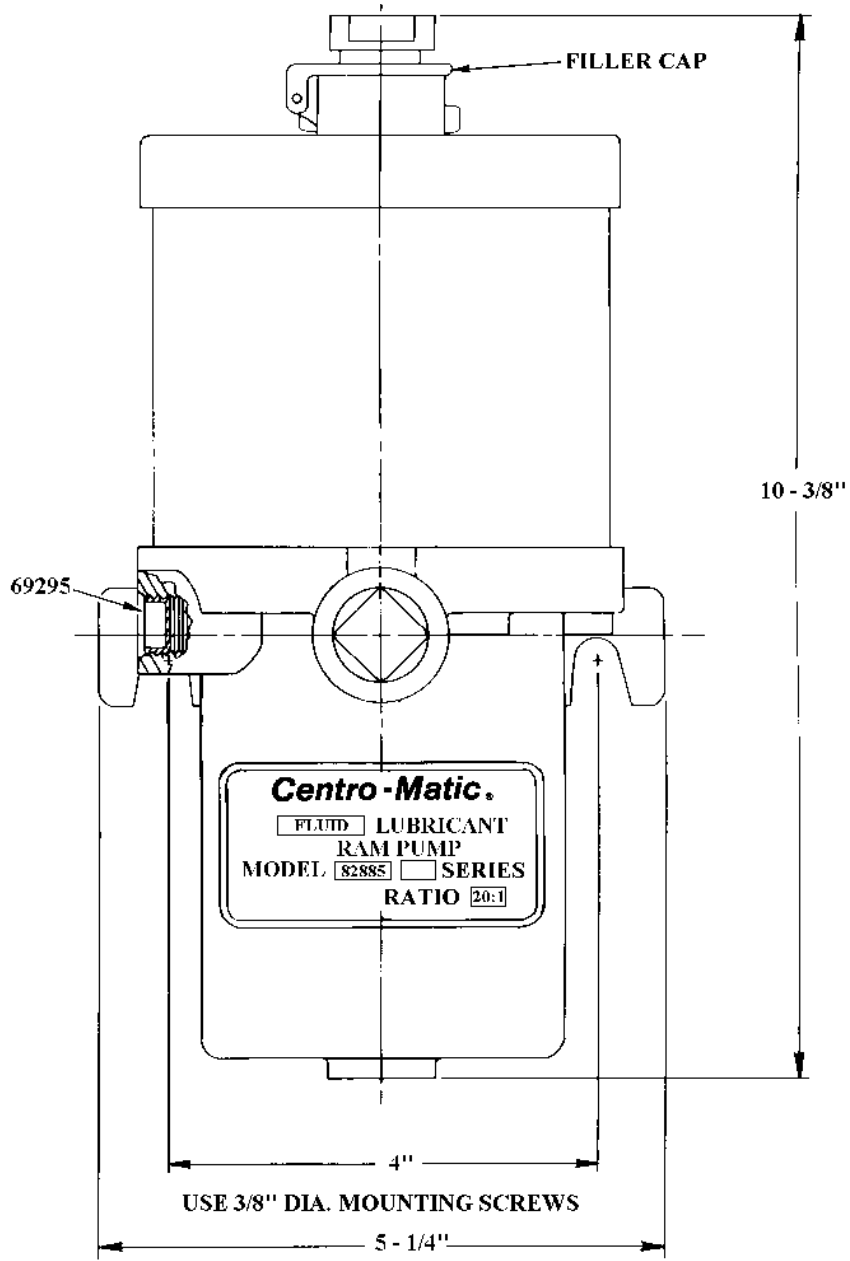

Types of installations

Frequency of lubrication cycle can be controlled mechanically, electrically or manually.

Mechanical control

When using mechanical motion of machine to control lubrication frequency, three way valve is engaged by cam, permitting air to pass through valve to pump, forcing air piston forward and lubricant through supply line to injectors. When the valve is disengaged, air exhausts back through valve, and spring in pump returns air piston, completing lubrication cycle. Cam dwell on three way valve must be arranged for a minimum of 10 seconds.




When mechanical motion of machine is too rapid to be used as a source of control for frequency of lubrication cycle, a cycle timer with adjustable settings may be used. See separate instructions for cycle timer 82703.

Electrical control

Electrical time switch opens three way solenoid valve, permitting air to flow to pump forcing air piston forward and lubricant through supply line to injectors. When valve closes, air exhausts back through valve, and spring in pump returns air piston, completing lubrication cycle. Frequency of cycle can be set by time switch.

Manual control

Opening three way valve for a minimum of 10 seconds permits air to flow to pump forcing air piston forward and lubricant through supply line to injectors. When valve is closed, air exhausts back through valve, and spring in pump returns air piston, completing lubrication cycle.

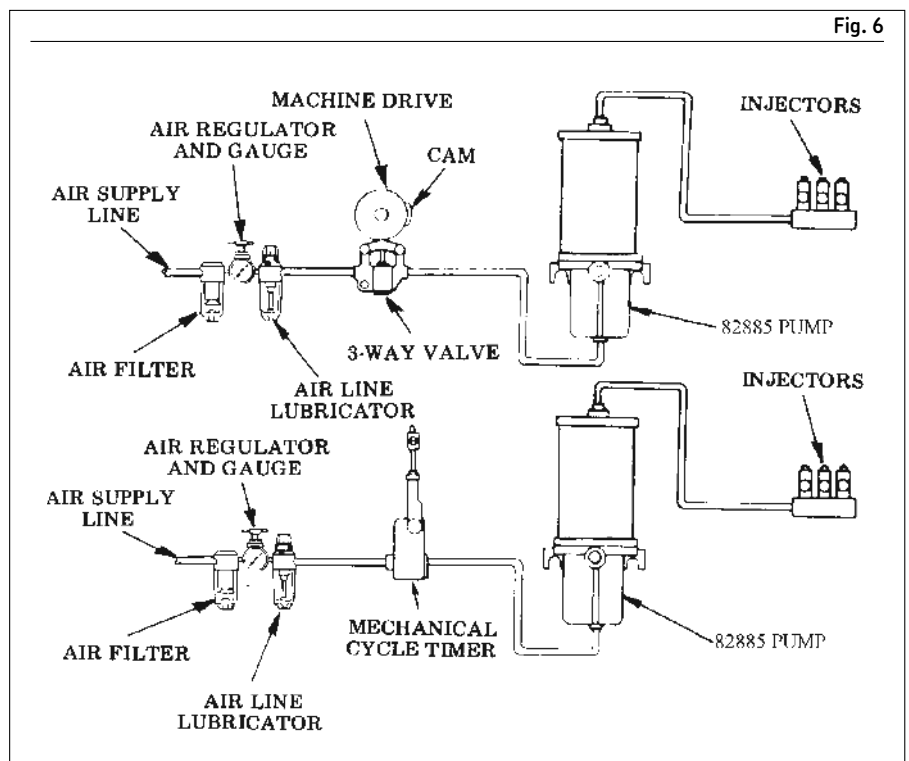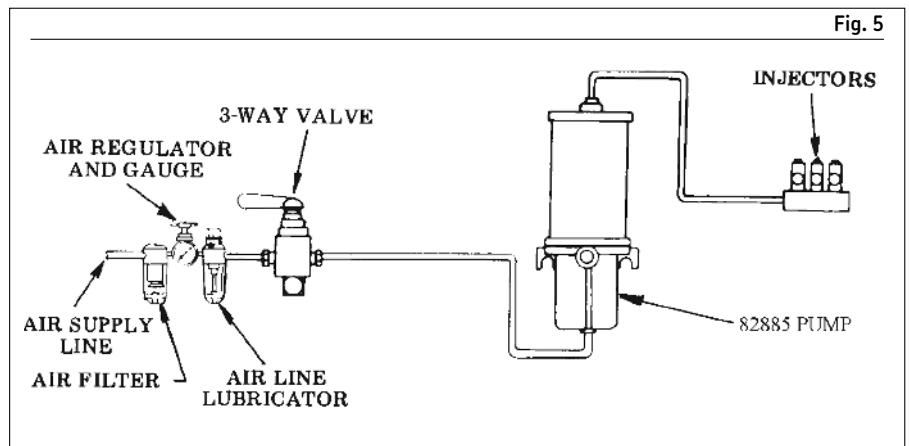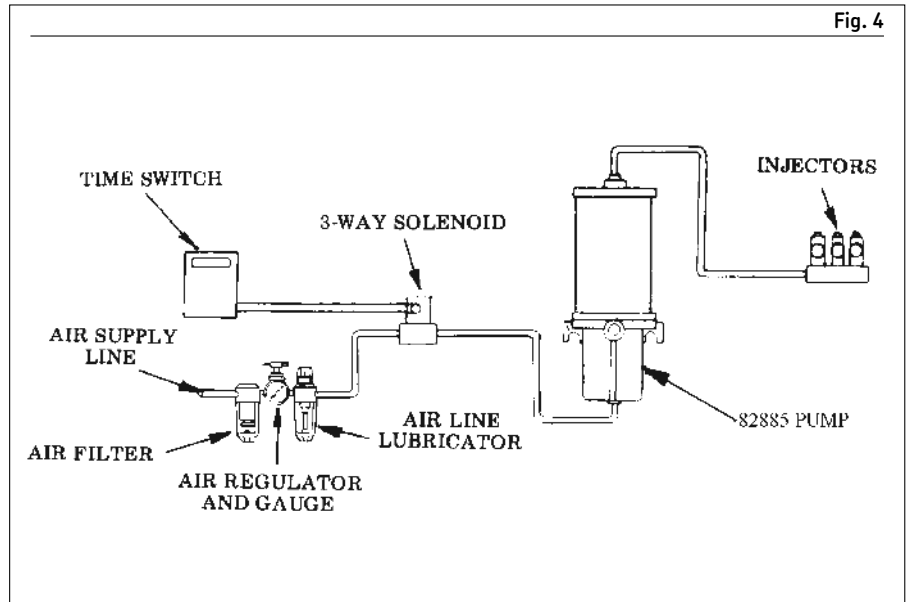

Warranty

The instructions do not contain any information on the warranty.
This can be found in the General Conditions of Sales, available at:
www.lincolnindustrial.com/technicalservice or www.skf.com/lubrication.

skf.com | lincolnindustrial.com

© SKF and Lincoln are registered trademarks of the SKF Group.

© SKF Group 2022
The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless prior written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein.

October 2022 · Form 402818 Version 2